


U-POL RAPTOR

Guidance notes for applying U-POL RAPTOR onto concrete.

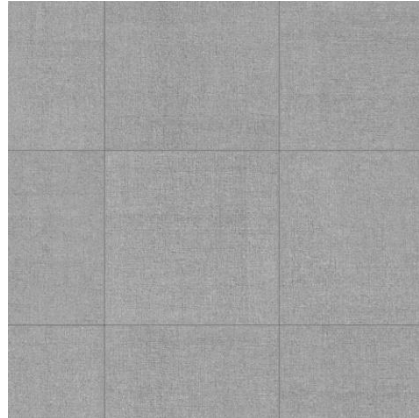

Health and Safety: When handling/preparing concrete we recommend the use of goggles and gloves.

1. Ensure that substrate is clean and dry.
 2. Use a brush to remove all loose debris.
 3. Pressure wash or scrub the surface to remove further debris.
 4. Use a solvent cleaner to remove oil stains.
 5. Vacuum the area to remove any dust.
 6. U-POL RAPTOR will adhere directly to concrete but for optimal results we would recommend that the surface is sealed. Surface sealers such as a dilute PVA solution, stabilizing solution or masonry primer can be used for this purpose. Always follow the manufacturers' instructions for application and drying before applying U-POL RAPTOR.
 7. Mask off all areas where you do not wish to apply U-POL RAPTOR.
 8. Mix U-POL RAPTOR in accordance with instructions FILL-SHAKE-SHOOT.
 9. Allow RAPTOR to dry as per the instructions.
 10. Note: Fresh concrete must be allowed to cure for a minimum of 28-days before overpainting.
- The information contained in this document is based on present technical knowledge, and it is the responsibility of the user to take all necessary steps to ensure the suitability of the product for the intended purpose.